


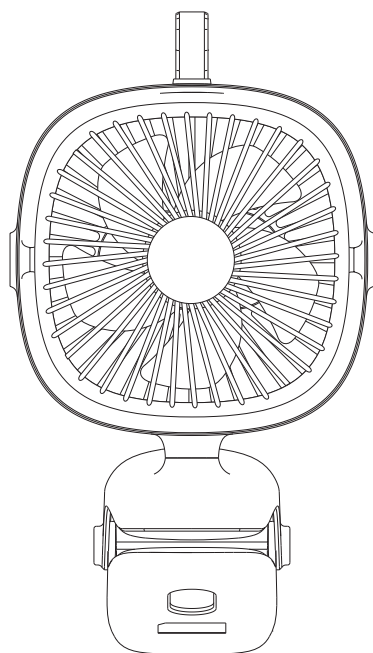


充電式クリップファン

CLFN-GY

取扱説明書



各部の名称

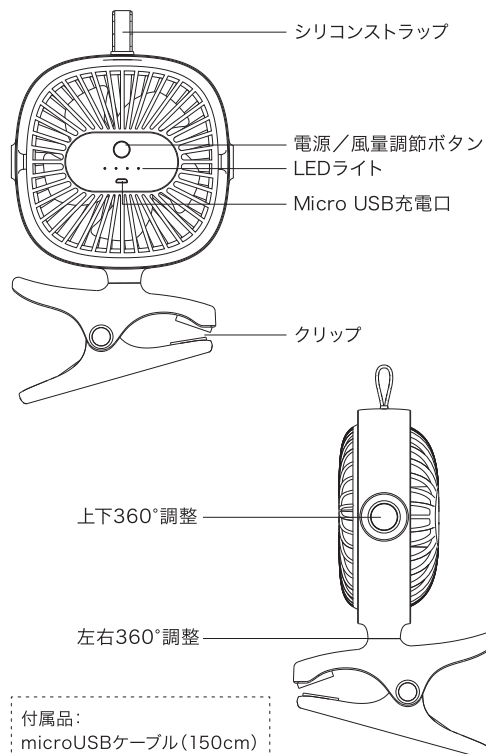

特長

- ・卓上/クリップの2通りで、用途に合わせて使用できます。
 - ・回転音が気にならない静音設計です。
 - ・風向を上下左右に360°調整できます。
 - ・フル充電 弱風モードで約4時間の連続使用が可能です。
 - ・簡単なボタン操作で風量を切り替えられます。
- 風量は 弱・中・強・リズム風* の4段階です。
※…自動で強弱を繰り返すモードです。


仕様

定格入力	DC5V/0.5A
内蔵電池	リチウムイオン電池 2000mAh
風量切替	弱、中、強、リズム風 の4モード
材質	ABS、PP、シリコン
寸法	267×152×138mm
使用可能時間	弱:4時間、中:2時間、強:1~1.5時間、 リズム風:3~4時間
充電時間	約4時間
付属品	microUSBケーブル(150cm)

LED ライトについて

充電時は、バッテリーの充電量に応じた数のLEDライトが点滅します。バッテリーが完全に充電されると、4つのLEDライトは点灯状態になります。電力が低下すると、LEDライトが点滅します。

電池残量表示

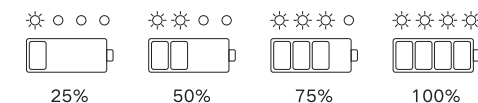

風量選択とLED表示について

風量	LED表示	ボタンクリック
弱風	☀○○○	1回
中風	☀☀○○	2回
強風	☀☀☀○	3回
リズム風	☀☀☀☀	4回
電源オフ	○○○○	3秒以上長押し

⚠ 使用上のご注意

- ・初めて使う際は満充電にしてからお使いください。
- ・分解したり、自分で修理をしないでください。
- ・防水性はありません。
- ・ファンを投げないでください。
- ・充電する際は定格電圧でご使用ください。
- ・常温環境で使用、保管してください。
- ・micro USB ケーブルを差し込む際は角度が斜めにならないようご注意ください。
- ・無理やり差し込むと故障の原因になります。


総発売元 **トラスコ中山株式会社** お客様相談室 ☎0120-509-849
〒105-0004 東京都港区新橋4丁目28番1号 E-mail: techno.center@trusco.co.jp
MADE IN CHINA <http://www.orange-book.com/>




Portable Clip Fan

CLFN-GY

User Manual

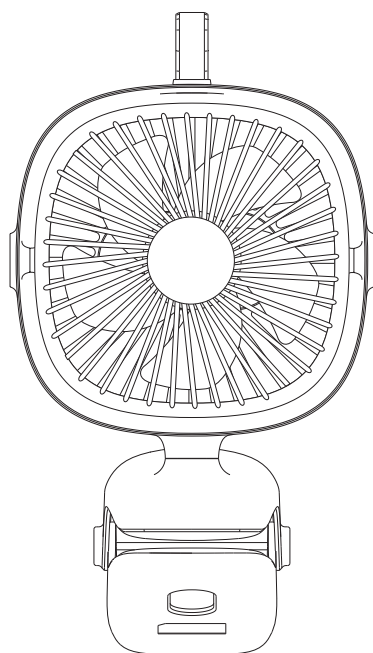

Product introduction

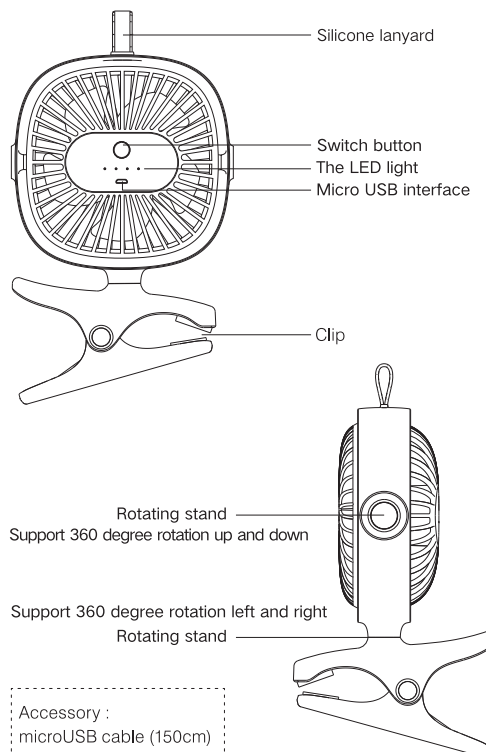

Product features

- ・ Can stand can clip, free placement, enjoy everywhere.
- ・ 1 super mute mode, low noise, quiet and comfortable.
- ・ 360° corner circulation ventilation .
- ・ 18650 Li-ion Battery, capacity increased to 2000mAh, long lasting life.
- ・ Support four windshield adjustment, anytime and anywhere comfortable to use.
- ・ Four wind speeds are the ocean wind, suddenly large or small, let you experience the comfort of the ocean wind.

Product parameters


Input : DC5V-0.5A
Battery capacity : 2000mAh
Speed Mode : 4 Shifts
Material : ABS/PP/Silicone
Product size : 267X152X138 mm
Battery runtime : (gentle wind)4h , (fresh wind)2h ,
(strong wind)1~1.5h , (ocean wind)3~4h
Battery charge time : 4h
Accessory : microUSB cable (150cm)

Light mode

When charging the product, the corresponding indicator light will flash when the battery power reaches a certain level, and the 4 LED indicators will always be on when fully charged.

When the power is low, the LED light flashes.

LED power display

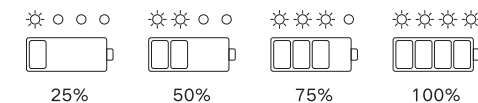

Wind speed LED indicator

Switch button	The LED light	Wind speeds
1 Press	☀○○○	1 gentle wind mode
2 Press	☀☀○○	2 fresh wind mode
3 Press	☀☀☀○	3 strong wind mode
4 Press	☀☀☀☀	4 ocean wind mode
Long press 3 seconds	○○○○	turn off the power

⚠ Caution

- ・ For the first time, please fully charge the product.
- ・ Do not disassemble, repair or modify the product by yourself.
- ・ Do not expose the product to rain or moisture.
- ・ Do not throw this product to avoid damage caused by falling.
- ・ Please use the rated voltage power supply for charging.
- ・ Please store and use this product in normal temperature environment.
- ・ Do not put foreign bodies or fingers into the fan to avoid damage or damagePersonal injury.
- ・ Please insert the microUSB cable vertically. Forcible insertion may cause a failure.